



KIT 1506

85150600200

PETERBILT 359 CONVENTIONAL TRACTOR

The powerful Peterbilt 359 Conventional Tractor is a custom tractor designed to handle the rigors of heavy duty hauling. From the dusty logging roads of the Pacific Northwest to the unending ribbons of asphalt that cross the nation, the Peterbilt 359 is recognized as a quality machine that will deliver thousands of miles of reliable service. Peterbilts are custom made trucks that are built to suit the specific hauling needs of each new owner. The Peterbilt reputation is built on a history of reliability and durability. Throughout the Peterbilt 359, every effort is made to use lightweight alloys to lower vehicle weight which will permit the transportation of heavier payloads. The cab is constructed from corrosion resistant aluminum panels that are joined with aircraft quality fasteners to create one of the industry's most rigid body structures. These trucks use a strong ladder frame designed to with-

stand continual punishment. The exclusive Peterbilt "Air-Trac" suspension provides a variable spring rate capability that produces a smoother ride. This ride is known as "The Peterbilt Feeling." Tilt the long, pivoting hood forward, and you will see a powerful Caterpillar 3406 Six-Cylinder Diesel nestled between the frame rails. This renowned engine is equipped with an exhaust driver turbocharger and a "Brake Saver" that retards engine rpm's when decelerating, thus adding maximum miles to the life of the brakes.

To transform your Peterbilt 359 into a rolling beauty, it is equipped with dual exhausts, dual air horns, a spacious walk-in sleeper, dual fuel tanks, sleeper mounted lights and alloy Reynolds wheels mounted on high mileage radial tires. With all these features the Peterbilt Conventional Tractor is truly "The King Of The open Road."



* REPEAT SEVERAL TIMES
* A REPETER PLUSIEURS FOIS



* OPTIONAL PARTS
* PIECES EN OPTION



* DECAL
* DECAL COMANIE



* ALTERNATIVE ASSEMBLY
* ENSEMBLAGE ALTERNATIVE



* CEMENT TOGETHER
* A COLLER



* REMOVE AND THROW AWAY
* A RETIRER ET JETER



* DO NOT CEMENT
* NE PAS COLLER

READ THIS BEFORE YOU BEGIN

- * Study the assembly drawings.
- * Each plastic part is identified by a number.
- * In the assembly drawings, some parts will be marked by a star (★) to indicate chrome plated plastic.
- * For better paint and decal adhesion, wash the plastic parts in a mild detergent solution. Rinse and let air dry.
- * Check the fit of each piece before cementing in place.
- * Use only cement for polystyrene plastic.
- * Scrape plating and paint from areas to be cemented.
- * Allow paint to dry thoroughly before handling parts.
- * Any unused parts may be discarded.

DECAL APPLICATION INSTRUCTIONS

1. Cut desired decal from sheet.
2. Dip decal in water for a few seconds.
3. Place wet decal on paper towel.
4. Wait until decal is movable on paper backing.
5. Place decal in position on model, face up and slide backing away.
6. Press out air bubbles with a soft damp cloth.
7. Milkiness that may appear is for better decal adhesion and will dry clear. Wipe away any excess adhesive.
8. Do not touch decal until fully dry.
9. Allow the decals 48 hours to dry before applying clear coat.

NOTE: Decals are compatible with setting solutions or solvents.

LIRE CE QUI SUIT AVANT DE COMMENCER

- * Etudier les schémas de montage.
- * Chaque pièce en plastique est identifiée par un numéro.
- * Sur les schémas de montage, certaines pièces sont marquées d'une étoile (★) pour indiquer qu'elles sont en plastique chromé.
- * Pour une meilleure prise de la peinture et des autocollants, laver les pièces en plastique avec une solution détergente peu concentrée. Les rincer et les laisser sécher à l'air.
- * Vérifier que chaque pièce s'ajuste bien avant de la coller en place.
- * N'utiliser que de la colle pour polystyrène.
- * Gratter les parties à coller pour enlever le chrome et la peinture.
- * Laisser la peinture bien sécher avant de manipuler les pièces.
- * Toute pièce inutilisée peut être jetée.

DIRECTIVES D'APPLICATION DES AUTOCOLLANTS

1. Découper l'autocollant désiré de la feuille.
2. Tremper l'autocollant dans de l'eau pendant quelques secondes.
3. Placer l'autocollant mouillé sur une serviette en papier.
4. Attendez que l'autocollant puisse être déplacé sur son support en papier.
5. Mettre l'autocollant en position sur le modèle face sur le dessus et faire glisser le support pour l'enlever.
6. Appuyer avec un chiffon doux humide pour éliminer les bulles d'air.
7. La substance laiteuse qui peut apparaître est destinée à améliorer l'adhésion de l'autocollant et devient incolore au séchage. Essuyer pour enlever tout excédent d'adhésif.
8. Ne pas toucher l'autocollant tant qu'il n'est pas bien sec.
9. Laisser l'autocollant sécher pendant 48 heures avant d'appliquer une couche transparente.

REMARQUE: Les autocollants sont compatibles avec les solutions de fixage ou les solvants.

This paint guide is provided to complete this kit as shown on the box.

Ce guide de peintures est fourni pour reproduire le modèle réduit qui apparaît sur la boîte.

SemiGloss Black	Noir Satiné
Tan	Havane
Red	Rouge
Gloss Purple Metallic	Pourpre Brillant Metallisé
Transparent Red	Rouge Transparent
Flat Black	Noir Mat
Transparent Amber	Ambre Transparent


If you have any questions or comments, call our hotline at: **(800) 833-3570**
or, please write to:

Revell-Monogram Consumer Service Department, 725 Landwehr Road, Northbrook, Illinois 60062


Be sure to include the plan number (85150600200), part number, description, your return address and phone number.

Visit our website: www.revell.com


A

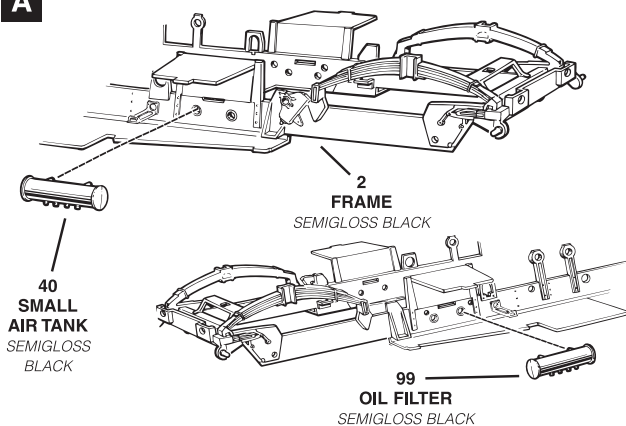


B

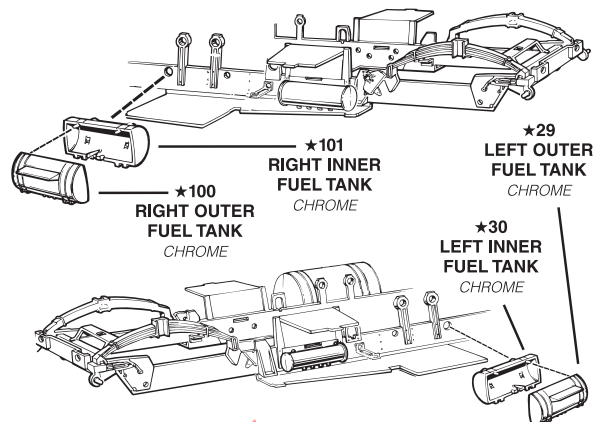


C

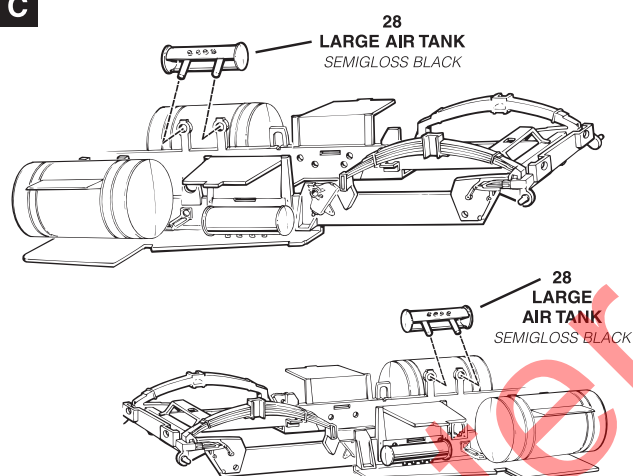


D

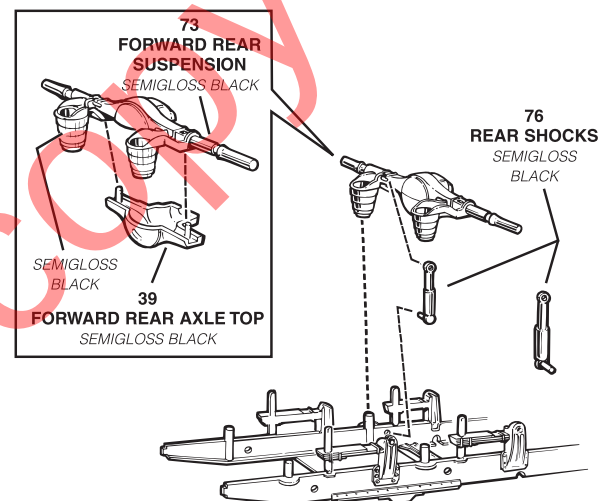

E

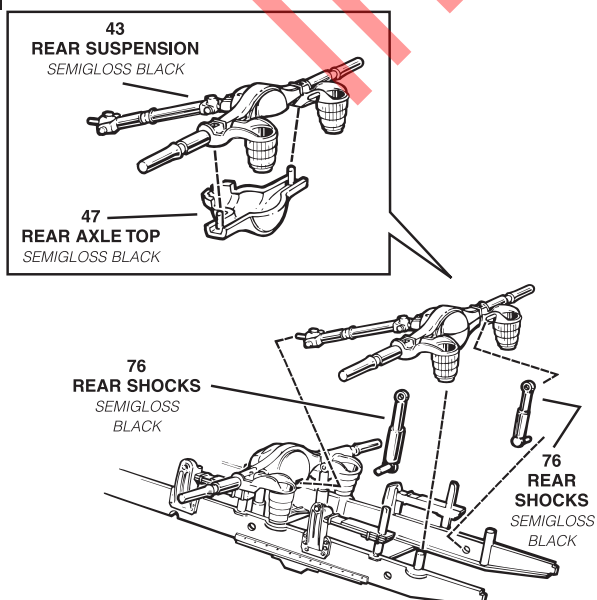


F

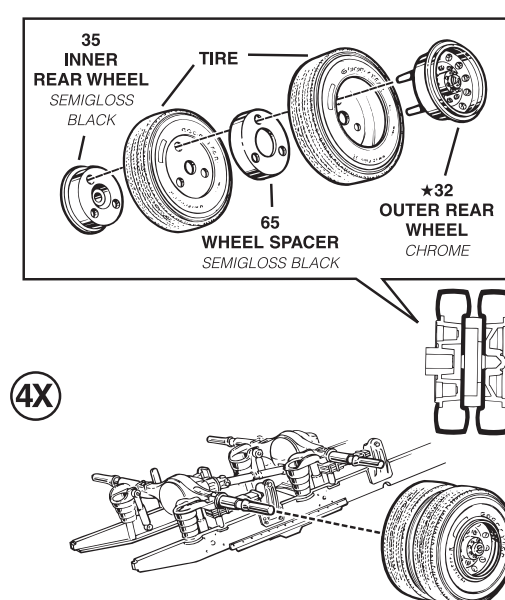


1

CHASSIS ASSEMBLY CONTINUED

G

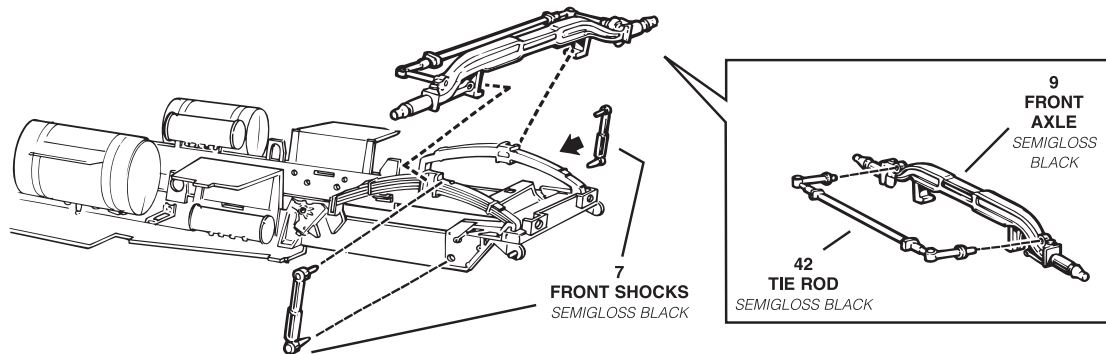


H

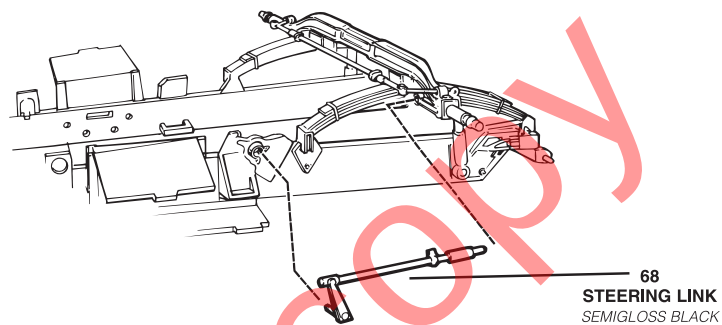


2

WHEEL ASSEMBLY


A

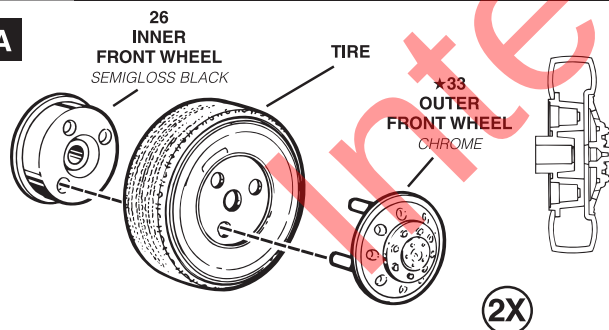


B

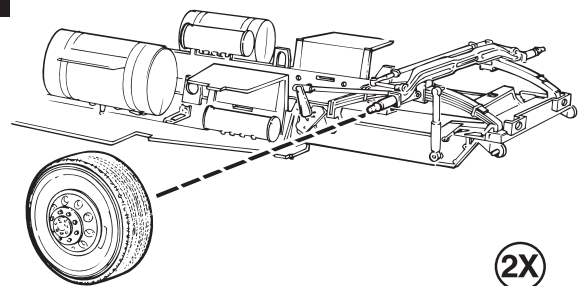

C

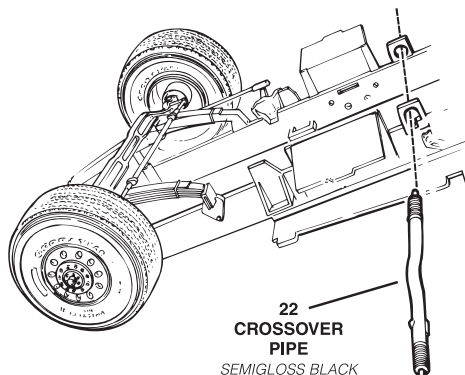


D

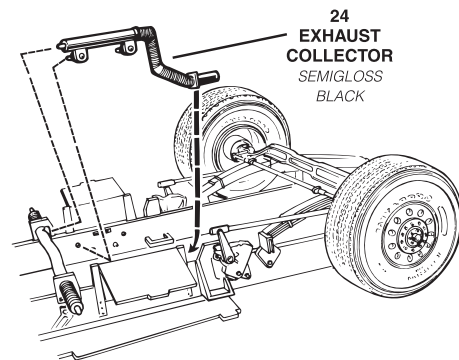


3

ENGINE ASSEMBLY


A

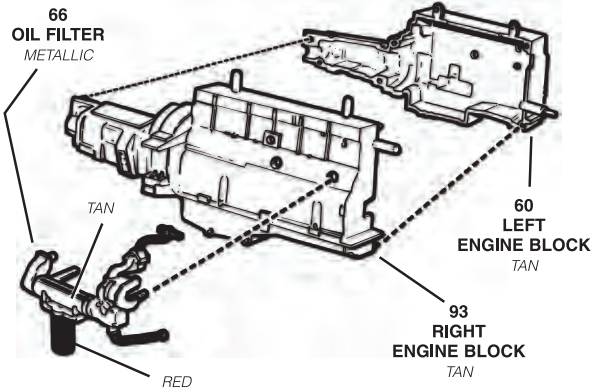


B

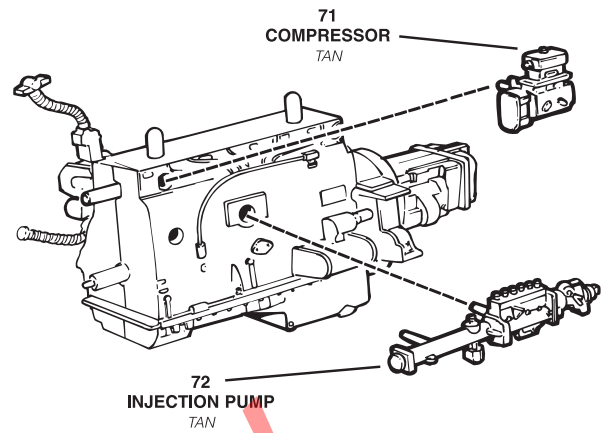


C

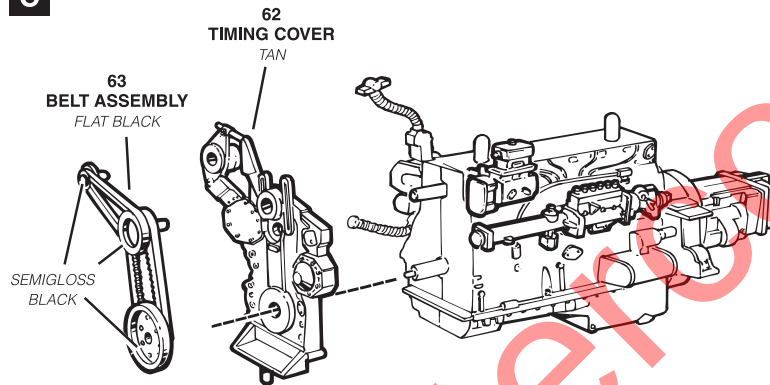


D

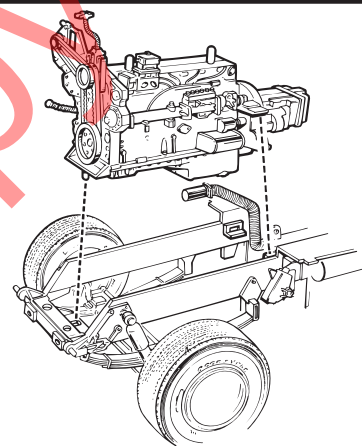

E

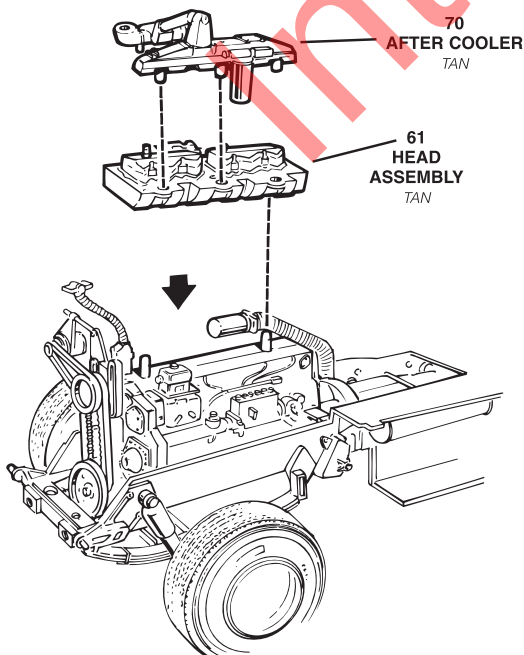


F

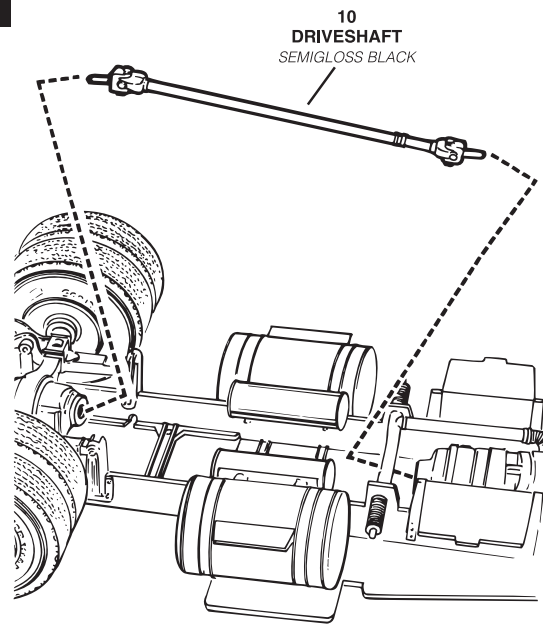


4

BODY ASSEMBLY


A

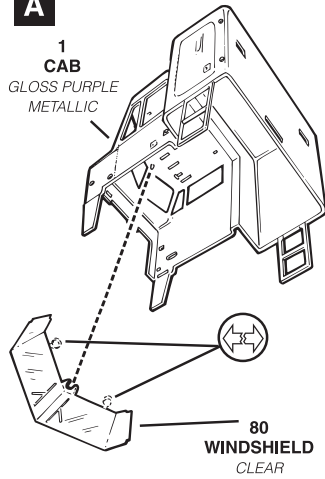

B

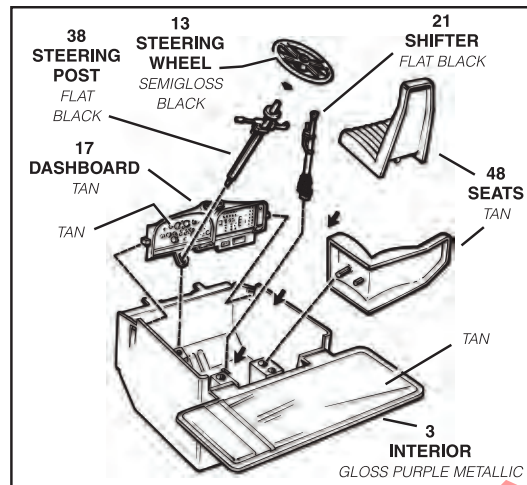


C


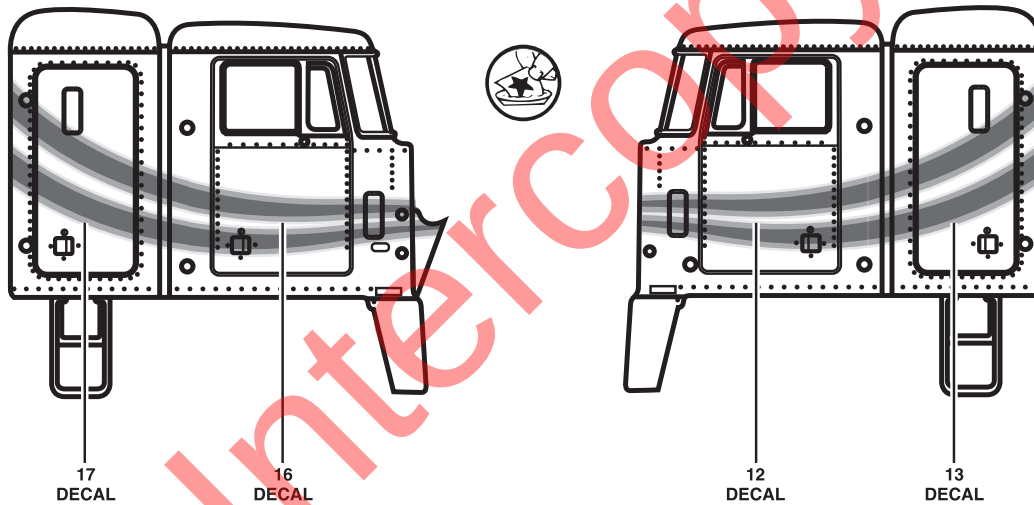


NOTE: APPLY CAB AND HOOD GRAPHICS IN THIS STEP, FOR FURTHER PLACEMENT OF GRAPHICS REFER TO THE STEP 6 DECAL PLACEMENT.

D






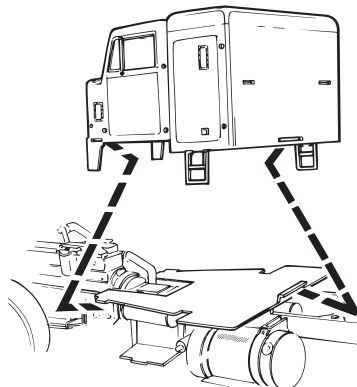


E

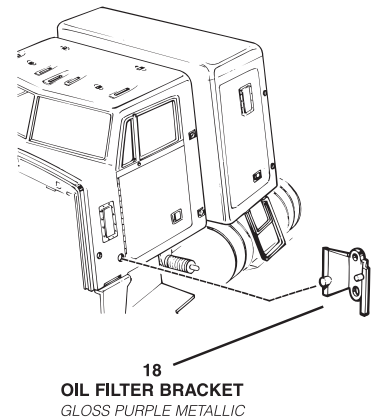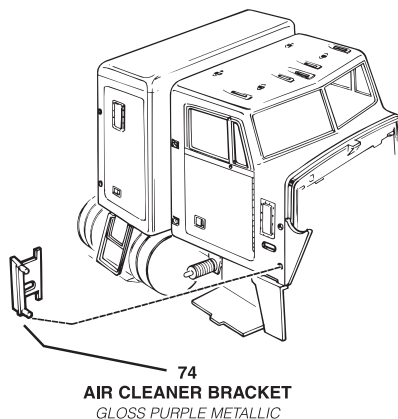




4









BODY ASSEMBLY CONTINUED

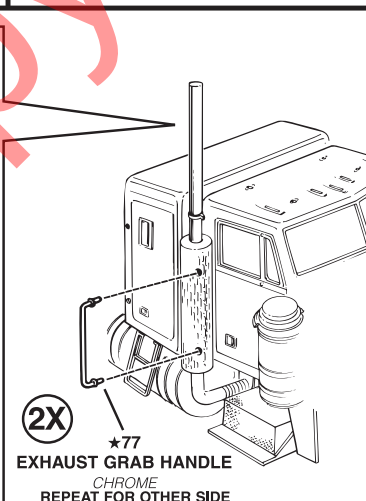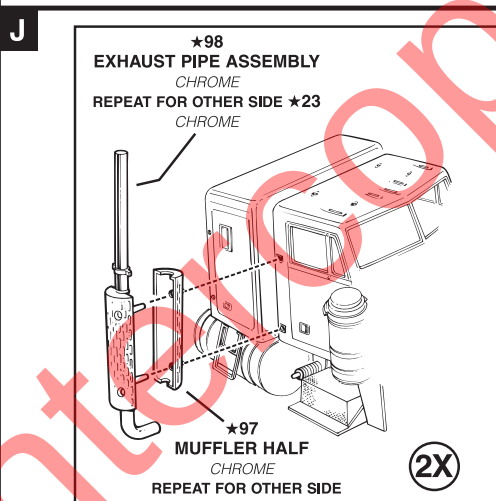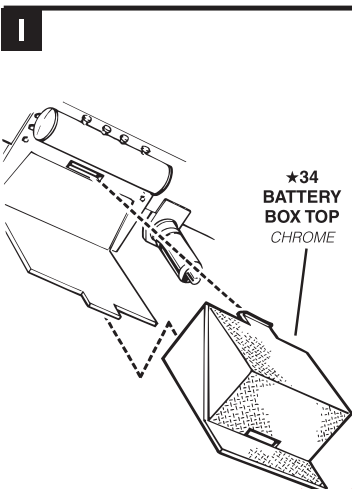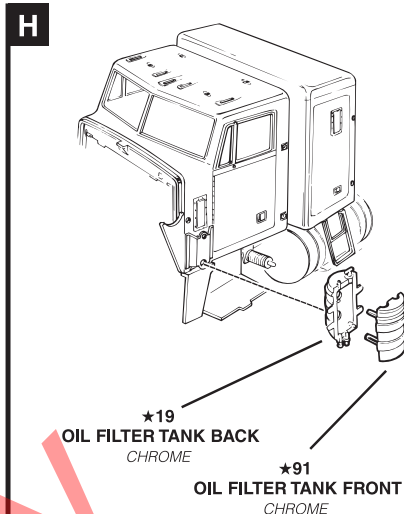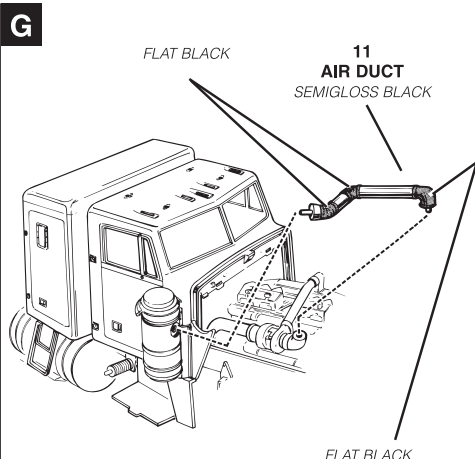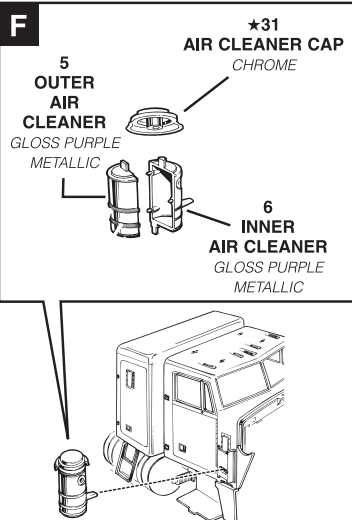

5

FINAL ASSEMBLY

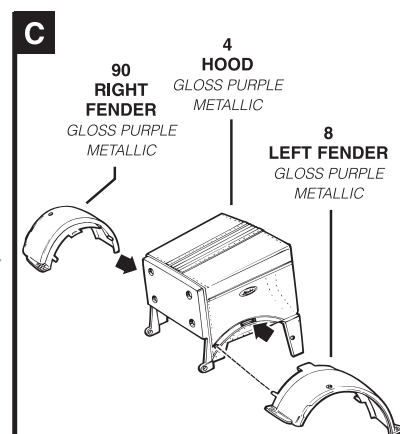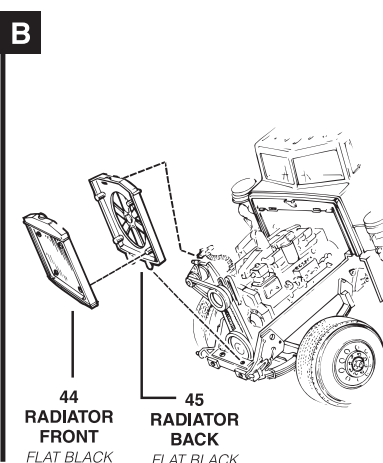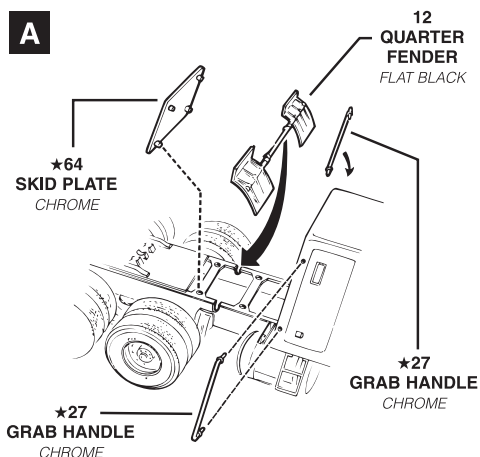

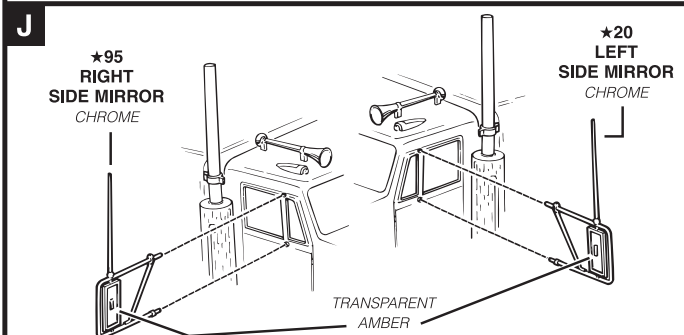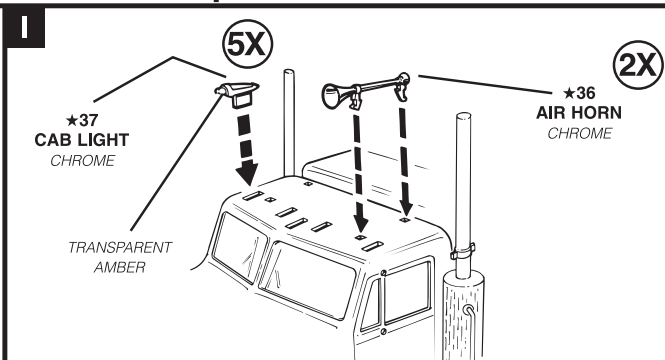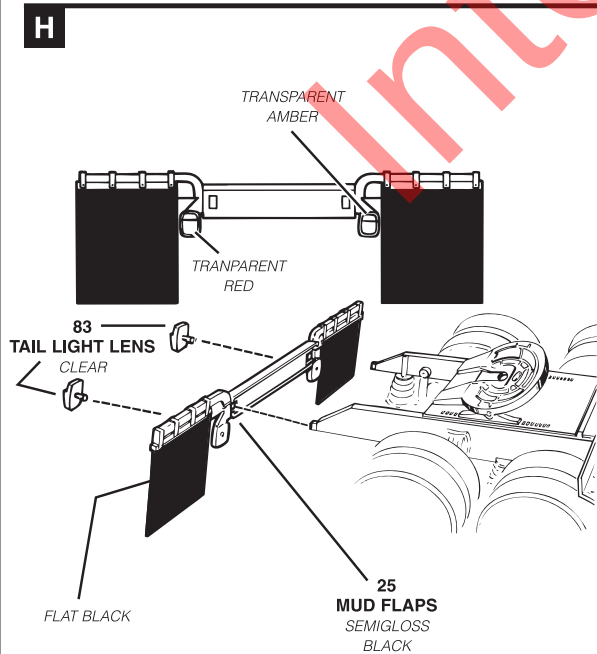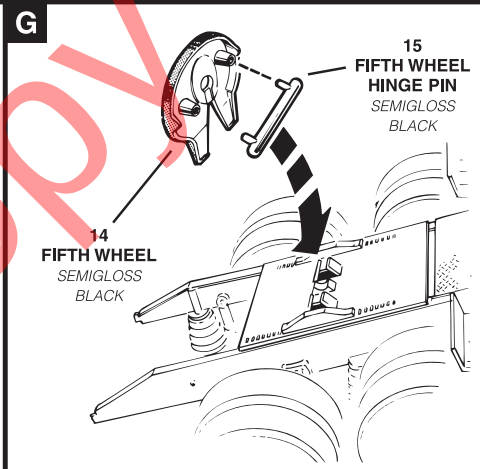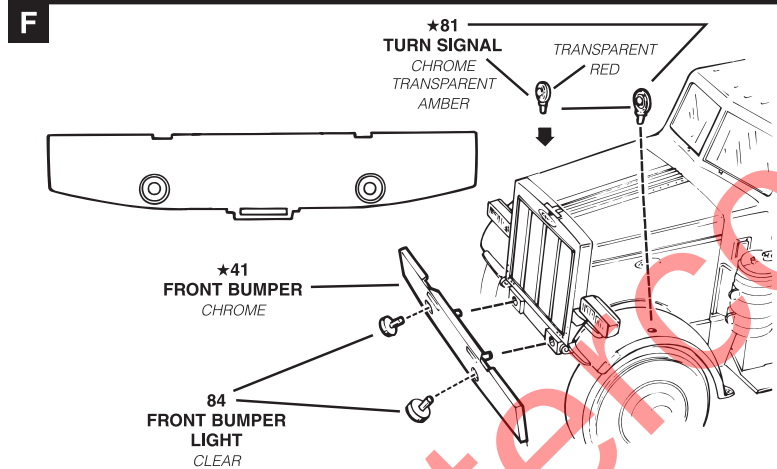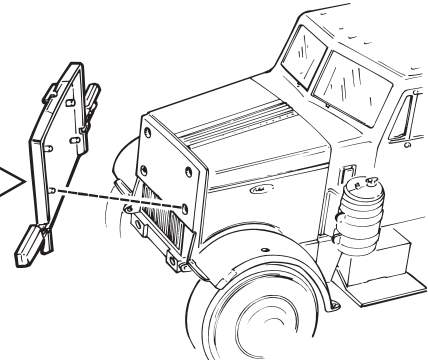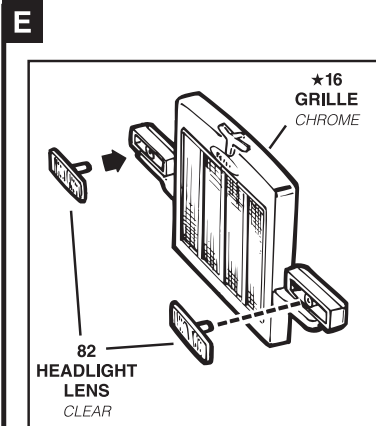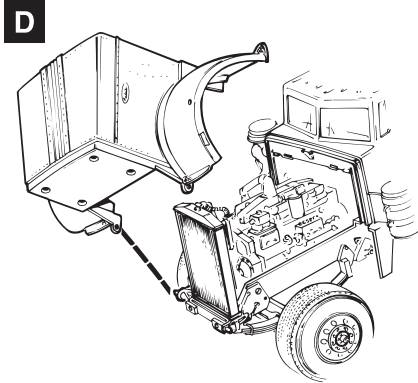

DECAL PLACEMENT

